



KONVEKTA

Technical leadership starts with ideas.

Operating instructions

for KONVEKTA
air conditioning units

StreamLine

SL700 – SL800 – SL850 – SL900



with control system KS60

R134a
24 Volt DC

ID#: BBA-KL8S022AA
Version: A01

Konvekta AG
Am Nordbahnhof 5
34613 Schwalmstadt
Germany



+49 (0) 66 91 / 76 – 0
+49 (0) 66 91 / 76 - 200
Info@konvekta.com
www.konvekta.com

Contents

Page:

• Introduction	3
• Information on the operating instructions	4
1. Technical data	4
1.1. Compressor type K VX	5
2. Intended Use	5
2.1. Generally information for a/c unit	5
2.2. Operating Conditions	6
3. Control unit KS60	6
3.1.1. Auto-test	6
4. Operation	6
4.1. Operation panel / function of the keys	7
4.2. Operation of a/c system	7
4.3. Adjustment of temperature	7
4.4. Recirculated air operation - only in case of a/c units with Rec. air flaps option	7
4.5. REHEAT activate / stop	8
4.6. Display of air duct temperature	8
4.7. Indicate outside temperature => only in case of a/c units with heating option	8
5. Maintenance / Service	8
5.1. Troubleshooting	9
6. Warranty Conditions	9
7. Waste disposal in accordance with legal provisions	10
8. History of modification	10

Appendix:

- Maintenance Schedule [VP07050618](#)

Introduction

These operating instructions have been written for drivers, operators and the maintenance staff of your air conditioning unit.

In this context, we refer implicitly to the compliance with our general installation guidelines. These can be obtained from the KONVEKTA technical after sales service: TKD@konvekta.com.

Please observe our valid safety instructions, available under www.konvekta.de/asv.html. In case of order placement or any other conclusion of contract the safety instructions get integral part of the contract.

These operating instructions have to be read carefully and made use of before the first start-up and after that regularly by each person who is involved in handling the machine:

- Operation including troubleshooting and waste disposal of fuels and auxiliary agents.
- Servicing, inspection, repair
- Transport

This facilitates the handling and avoids trouble caused by improper operation. Working in compliance with these operating instructions increases operation reliability and service life of the air conditioning unit and reduces life cycle costs.

Please complete these instructions by adding the national provisions for prevention of accidents and environmental protection.

These instructions are part of the air conditioning unit. Always have a copy at hand in the driver's cabin.

You will certainly understand that we will not recognize any warranty claims due to improper handling, inadequate maintenance, applications that do not correspond with the determined use, utilization of non-admitted fuels or the non-observance of safety provisions.

KONVEKTA will annul without notice all obligations concerning guarantee, service contracts etc. regardless if granted by **KONVEKTA** or its distributors in case other than original **KONVEKTA** spare parts or parts bought from **KONVEKTA** AG have been used for maintenance and repair.

These operating instructions contain all necessary information to operate your air conditioning unit. In case you need more explanations please contact the next **KONVEKTA** service station.

^① On our website www.konvekta.com in category >service< you will find a survey of contact details of all our service partners close to your location.

Information on the operating instructions

These operating instructions are valid for the air conditioners - and heating systems type:

➤ SL700	➤ SL800	➤ SL850	➤ SL900
----------------	----------------	----------------	----------------

with control system KS60.

- ☞ When taking the unit into operation we recommend adding the following data. This will also be important for your orders of spare parts, and in case of warranty.

Serial number of the unit:

Order No.:

Year of construction:/ (MM/JJ)

Date of first operation:// (TT/MM/JJ)

The machine is in accordance with the EC machinery directive 2006/42/EC.

The unit contains or needs fluorinated greenhouse gas for operation and is subject to identification requirements in accordance with F-Gas Regulation 517/2014.

Due to the fact that scope of supply depends on the order, equipment of your product may differ in some parts of description.

In case your product is equipped with details not shown or described in the operating instruction, your KONVEKTA -Service-Station will always be at disposal for informing you about correct operation.

In the course of further developments we reserve the right to technical modifications without notice. Guarantee and liability conditions of KONVEKTA AG's general business conditions are not enlarged by the above notes.

Indications and photos should neither be copied and circulated nor used for competitor's purposes. All rights according to the copyright remain expressly reserved.

Manufacturer: KONVEKTA AG, Postfach 2280, D-34607 Schwalmstadt

1. Technical data

Type	SL700	SL800	SL850	SL900
Cooling capacity [Watt]	35.000	39.000	41.000	44.000
Cooling capacity [kcal/h]	30.100	33.600	35.300	37.900
Cooling capacity [BTU/h]	119.600	133.200	140.100	150.300
Heating capacity Q100 [Watt]	44.000	44.000	47.000	47.000
Air capacity free blowing [m/h ³]	7080	7080	9440	9440
Max. current consumption at 26V [A]	77	77	92	107
Current consumption At normal operation 26V [A]	20	20	24	28
Compressor	KVX40/560K	KVX40/655K	KVX40/655K	KVX50/755K
Measurements L/B/H [mm]	4050/1890/210			
Refrigerant	R134a			
GWP	1.430			
Limitation of operation [°C]	>50			
Roof radius [m]	>8			



Important!

In vehicles that are equipped with an a/c unit with heating function the heating medium has to consist of water/glycol – antifreeze protection (conform the mixing ratio to manufacturers` instructions). This is absolutely necessary to prevent the heaters from frost damage!
 (The prevalent antifreeze filling of the vehicle manufacturers goes down to -40 °C.)

1.1. Compressor type KVX

Carry out the first oil change with the first maintenance, then every 3 years. Also clean the oil intake strainer. The oil charge is dependent on the compressor type (see table).

Compressor type	KVX40/560K	KVX40/655K	KVX50/755K
Weight	34 kg	35 kg	43 kg
Refrigerant oil / Quantity (Liter)	Esteröl SE55 / 2	Esteröl SE55 / 2	Esteröl SE55 / 2,5
Magnetic clutch	24V DC	24V DC	24V DC



Important:

To avoid leakages at the shaft seal of the compressor:

The compressor should be started every 4 weeks for approx. 15 minutes!

This also applies when the vehicle is not into operation for a longer period or when the air conditioning unit is not used!

2. Intended Use

The KONVEKTA air conditioning unit is an air conditioning system that works with the ozone friendly refrigerant R744 and which creates a pleasant and individually adjustable room temperature by means of forced convection. The determined use includes also the observance of the operating instructions as well as the proof of regular inspections.

2.1. Generally information for a/c unit



Attention in case of roof top a/c units: Never switch on the a/c unit during car-wash!

- The a/c unit is operational with running engine only.
- At cooling operation the humidity inside the vehicle is decreased, which avoids steamed up windows.
- The a/c unit works most effectively with windows and doors shut. If, however, the interior of the standing vehicle has been heated up severely by exposure to sunlight, short-time opening of windows and doors may accelerate the cooling down process.
- At high outside temperature and humidity condensate might drip off the evaporator and make a puddle under the vehicle. This is quite normal and no sign for a leakage.
- The filter in the return air grid (optional) retains pollution. If the external air is contaminated with gas switch over to return air operation. The filter should be cleaned or replaced respectively on a regular basis so that the capacity of the a/c unit is not affected.
- If you think that the air conditioning unit has been damaged switch it off immediately in order to avoid further damage. The air conditioning unit may be taken into operation again only after it has been checked at a KONVEKTA Service Station.

^① On our website www.konvekta.com in category >service< you will find a survey of contact details of all our service partners close to your location.

2.2. Operating Conditions

NOTE: KONVEKTA uses components made of copper and aluminium, which last a whole unit lifetime under normal environmental conditions. Should the units be operated under aggressive environmental conditions, i.e. air containing salt-, phosphate- or ammoniac extremely, a corrosion of the copper- and aluminium components cannot be ruled out. The copper- and aluminium components of the KONVEKTA systems are not suitable for such extreme application conditions. We indicate emphatically, that corrosion is not subject to warranties for defects. KONVEKTA does not take over any warranties for defect, neither for corrosion nor for consequential damage resulting there from, nor for damages caused by cleaning the systems with highly compressed or corrosion advancing substances.

3. Control unit KS60

The air conditioning control **KS60** is a control and regulation device for air conditioners in modern buses. The bus driver is relieved from all questions of an optimum air conditioning in the passengers' compartment by a simple and clear handling. All functions of the a/c unit are adjustable by different key-buttons. Every button has an indicating lamp, called LED used as a control function of the buttons or in case of operating. LED is shining red if button is pressed or if unit is in operation. Control board KS60 is connected onto the original dash board lightning of the vehicle. This means that in case of running vehicle lamp, night lightning of control board (LED green) is also activated.

Note:

We recommend driving with automatic mechanism (*Key S5, see 4.1*). Additionally to the automatic the following functions can be activated:

- a) **SMOG**-flap manually, in order to prevent the entrance of exhaust fumes (in tunnels)
- b) **REHEAT**-function to dehydrate the steamed up wind shield

3.1.1. Auto-test

If voltage supply to unit is interrupted, unit starts a self test immediately after reset. Here all entrances and exits are controlled:

Process of auto test will be show at the display:

- 1. Indication of all LED's and display indication -88
- 2. Indication Software version: 03
- 3. Indication Configuration (DIP-Code, for example:)08
- 4. Indication of auto-test code 01, 02... etc.

After self-test, actual temperature can be read on display.

4. Operation




Attention in case of roof top a/c units: Never switch on the a/c unit during car-wash!

Danger of accidents!

- Focussing your attention on the road traffic is of top priority.
- Only operate your air conditioning unit when the traffic situation allows it!
- Please note that the control panel keys have not been designed for heavy stressing.
- Excessive or fast pressing of the keys for adjusting the set temperature does not accelerate the cooling down process. It possibly damages the control panel and so affects the general performance of the air conditioning unit.

4.1. Operation panel / function of the keys

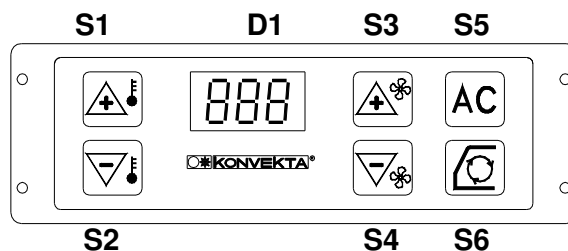

Short.	Function
D1	3-figure display
S1	required room temperature can be adjusted (increase) 16 to 28°C
S2	required room temperature can be adjusted (decrease) 16 to 28°C
S3	required air volume can be adjusted (increase), step 1 or 2 (resp. stepless adjustment)
S4	required air volume can be adjusted (decrease), step 1 or 2 (resp. stepless adjustment)
S5	A/C automatic (A/C ON/OFF)
S6	Recirculated Air operation close resp. open. Recirculated air flap; in case of closed recirculated air flap, LED inside key button is indicating.

4.2. Operation of a/c system

- Start vehicle engine (refer to orig. operating instruction of the vehicle).
- The air conditioner is activated by means of key  „a/c automatic“, LED inside key button is indicated. Pressing key S5 again, air conditioner switched off. The blowers are regulated automatically.
- With key  or  the required air volume can be adjusted manual.



ATTENTION:

In case of trouble, in the a/c cooling circuit, the LED-display key  (s. 5.1) is lighting up. Operation of the a/c system only after verification by qualified a **KONVEKTA-Service- Station**”

4.3. Adjustment of temperature

If a/c-unit is operating, vehicle inside temperature can be adjusted with key  or  , in a range of 16°C up to 28°C. In case of operating key (+) or (-), temperature can be increased or reduced. The actual temperature can be read on display.

4.4. Recirculated air operation - only in case of a/c units with Rec. air flaps option

In case of recirculated air operation (key S6 activated), the income of fresh air is interrupted and the air inside the vehicle is going to be circulated which avoids that outside air, possibly dirty because of exhaust fumes (tunnel driving) has a chance to penetrate into interior room of the vehicle.

Starting of the recirculated air operation, press key S6, the LED-display will light up. This position should not be adjusted very long. If windows are misting up, return air operation should be switched off:

If key S6 is pressed again the return air flap will be **reactivated** and fresh air operation restarted. The LED-display will **go out**.

Automatic In case of a temperature difference of more than 5°C between the set temperature (adjusted value) to the existing temperature the return air flaps switch to recirculated air operation.

Manual If the button S6 is pressed, the recirculated air function of the return air flaps will be maintained independently from a temperature difference.

4.5. REHEAT activate / stop

=> Only for units with heating option

Switching on of the air-conditioning system via button S5 afterwards the key **S5** will be pressed shortly twice (double click). **REHEAT** will be activated for a period of 20 minutes, the **LED-display will light up at the same time.**

=> Operation of the blowers at the highest speed level by key S3 (increase of the air flow output).

=> Recirculated air operation must be switched off.

The premature termination of the **REHEAT** is possible by double-pressing the key S5.

4.6. Display of air duct temperature

=> Only for units with heating option

While pressing buttons **S1**  and **S6**  actual air duct temperature is displayed for 2 seconds.

4.7. Indicate outside temperature => only in case of a/c units with heating option

=> Standard for units with heating, optional for units without heating starting software version 3.

While pressing buttons **S1**  and **S4**  actual outside temperature is displayed for 2 seconds.

5. Maintenance / Service

Please arrange regular dates for maintenance works and services with a KONVEKTA service station, as indicated in maintenance schedule bus no.: [WP07050618](#). On our website www.konvekta.com in category >service< you will find a survey of contact details of all our service partners close to your location.

- Only qualified staff is allowed to carry out these works! -

For general instructions on repair – and maintenance works please contact via email:

TKD@konvekta.com



Danger of accidents!

Qualified staff in charge of installation and maintenance have to be trained in accordance with EN 378-Part 4 and (EC) No.307/2008 and must strictly follow the legal provisions.

Any works or modifications at the air conditioner which are carried out improperly can lead to malfunction and so endanger operational reliability. We recommend having all works and modifications carried out at an authorized **KONVEKTA** Service Station.

Before carrying out any maintenance works at your air conditioning unit, carefully read the KONVEKTA safety provisions (TD00052A®) in order to avoid any dangers and accidents!

5.1. Troubleshooting



Only qualified staff is allowed to carry out these works!

Trouble	Cause	Repair <i>By authorized Service Station only</i>
a/c is not running	thermostat open	– check inside temperature ^① – re-adjust thermostat ^①
	electric connection disconnected	– check electric connections at switch-board
	relay defective	– check relay, replace if necessary
	defrost thermostat has switched off	– check evaporator blower, replace if necessary
	outside temperature too low (possible icing of evaporator)	– switch on „ventilation“ only
	evaporator coil dirty	– clean evaporator coil with compressed air
	magnetic clutch	– check connections at magnetic clutch
	compressor does not compress	– check high and low pressure, replace compressor if necessary
	excess pressure (pressure too high)	– check axial fans – check fuses at switchboard – clean condenser coil with compressed air
	excess pressure caused by high outside temperature	– run unit until pressure has stabilized ^①
	leakage in a/c unit, lack of refrigerant	– check a/c unit for leakages – refill refrigerant
Loud noise at compressor	low pressure, screen of expansion valve clogged	– clean screen; replace dryer
	defective bearing at compressor	– replace either bearing or entire compressor
	slack V-belt	– check V-belt at compressor drive

^① By operator

6. Warranty Conditions

The current „General Warranty Conditions“ KONVEKTA AG“ will apply. A copy will be furnished by the warranty department. Please contact gwl@konvekta.com.

7. Waste disposal in accordance with legal provisions

After the phase of use the last proprietor is responsible for the adequate waste management. The environmental regulations in the exporting country must be observed.

The following list contains the most important regulating literature, valid for the *Federal Rep. of Germany*:

- Resolution for dangerous substances
- Law for waste circulation (KRW/AfgG))
- Resolution for the proofs of utilization and removal
- Criminal Code (StGB) 28th section „criminal acts against the environment“ §326 - Environment jeopardizing waste management
- Law of chemicals § 27 - penal prescriptions
- Resolution for used oil
- Law of water balance
- Resolution for the waste management of old cars and the adaptation of road prescriptions
- Resolution (EC) No. 2037/2000 of the European Parliament and of the Council for materials that affect the ozone layer
- Resolution to prohibit certain ozone destroying halogen hydrocarbons.

The used refrigerant endangers the environment. When dealing with refrigerants the existing prescriptions and regulations are to be followed. **Only qualified staff is allowed to carry out these works!**

Water endangering substances - acc. to §§19g-19l - are solid, liquid, and gaseous substances. e.g.: mineral and tar oils (cooling oils), halogen containing organic combinations (refrigerants).

© Source of supply:
 - Bundesanzeiger
 - Beuth Verlag
 - dtv (Deutscher Taschenbuch Verlag)

8. History of modification

Version	Date	Name	Remark	File
A00	21.08.2013	B. Keßler	Source file	BAKL8S022AA
A01	08.03.2017	B. Keßler	Information on the operating instructions and technical data expanded with F-gas-regulation; deleted Pkt. 1.1; Pkt.7 updated	BAKL8S022AA